




WRONG WAY!!!

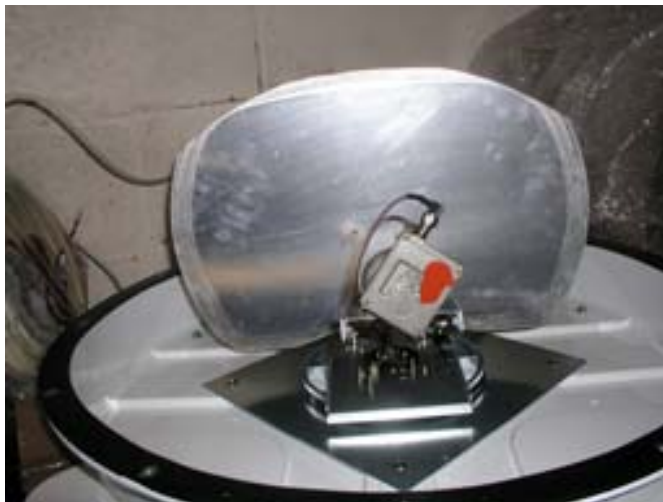

RIGHT WAY!!!

In order to get it to this position, you'll need to cut the cable tie behind the dish.